

| No. | Name | Note | No. | Name | Note |
|-----|--|-------------------|-----|----------------------------|----------------------|
| 1 | Angle valve | 1/4"Flare | 17 | Refrigerant service valve | 1/4"Flare |
| 2 | Discharge flange | 4" | 18 | Connector | 1/4"Flare |
| 3 | Solenoid valve | 50%(NC) | 19 | Liquid injection connector | 5/8"Flare |
| 4 | Solenoid valve | 75%(NC) | 20 | Suction flange | 5" |
| 5 | Solenoid valve | 25%(NC) | 21 | Cable box | Standard |
| 6 | Liquid(oil or refrigerant) injection connector | 3/8"Flare | 22 | Service flange | |
| 7 | Capillary | | 23 | Oil drain valve | |
| 8 | Check valve | 4" | 24 | Oil level switch | |
| 9 | Oil flow sight glass | | 25 | Discharge temp. sensor | 110°C |
| 10 | Oil heater | 150W/300W | 26 | Safety Valve | option |
| 11 | Oil filter cartridge | | 27 | Economizer port | 1 1/8", solder |
| 12 | Oil pressure differential switch | option | 28 | Oil level sight glass | |
| 13 | Oil cooler connector(out) | 3/4"Flare, option | 29 | Oil temp. sensor | option |
| 14 | Stop pin | option | 30 | Over flow port | option |
| 15 | Oil cooler(in) connector | 3/4"Flare, option | 31 | Solenoid valve | Stepless(NO), option |
| 16 | Angle valve | 1/4"Flare | | | |

*All stop valves are optional.

